



INSTRUCTIONS FOR CODING HT42 & HT43 HANDSET

HT42

RED BUTTON IS PRE CODED

BLUE BUTTON IS CODED BY THE DIPSWITCHES INSIDE

TO USE ON COMMON ENTRY SET THE INTERNAL DIP SWITCHES OF EVERY HANDSET TO THE SAME SETTINGS

TO PROGRAMME HANDSET C

CODE THE BLUE BUTTON FROM ONE HANDSET INTO RECEIVER

ALL HANDSETS SHOULD BE SET THE SAME AND 1 HANDSET ONLY NEEDED TO BE CODED

HT43

HAS THREE WHITE BUTTONS ALL WHITE WITH THE THIRD BUTTON IS SET BY INTERNAL DIPSWITCHES INSIDE
TOP TWO BUTTONS ARE PRE SET CODES

TO CODE HANDSET PRESS & RELEASE BUTTON ON RECEIVER THEN RED LED COMES ON THEN PRESS BUTTON ON HANDSET THEN RED LED GOES OUT